




Caution!

Be careful not to leave this product at more than 60 degrees Celsius for a long time. Or it may not work properly due to deformation.

This is a disposable product and the cleaning tape is not replaceable. Please properly dispose of it after the cleaning tape is running short.


1. Structure

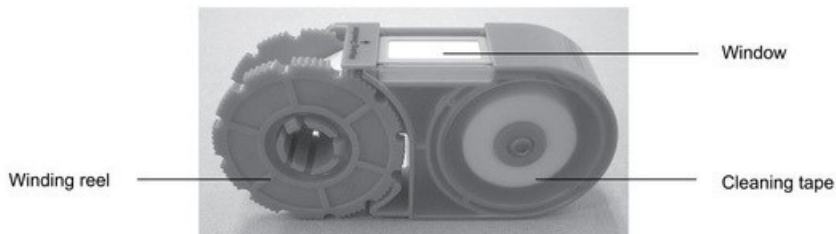

2. How to Use



(1) Take up the winding reel until the new cleaning tape appears in the window in the direction of an arrow as shown in the photo A.

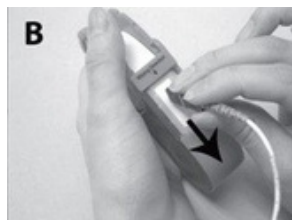

(2) Slide a connector while pressing its ferrule end-face against the tape in the direction of an arrow as shown in photo B.

(3) Keep the cassette with the used cleaning tape in the window after use. Make sure to keep up the winding reel until the new cleaning tape appears before every cleaning.

(4) If the cleaning tape is running out, please properly dispose of the cassette.